

# EMERGENCY SHOWERS AND EYE WASH




## EMERGENCY SHOWER AND EYEWASH

Safety shower and eyewash give an immediate deluge of water that would dilute and wash away injurious materials, such as corrosive chemical, fire, hot water, radioactive material.

The Emergency Shower was SIRIM approved and certified under ANSI Z358.1-2004 - American National Standard for Emergency Eyewash and Shower Equipment. Entire Emergency Shower was made from S304 Stainless Steel and operated by S316 Stainless Steel Ball Valve.



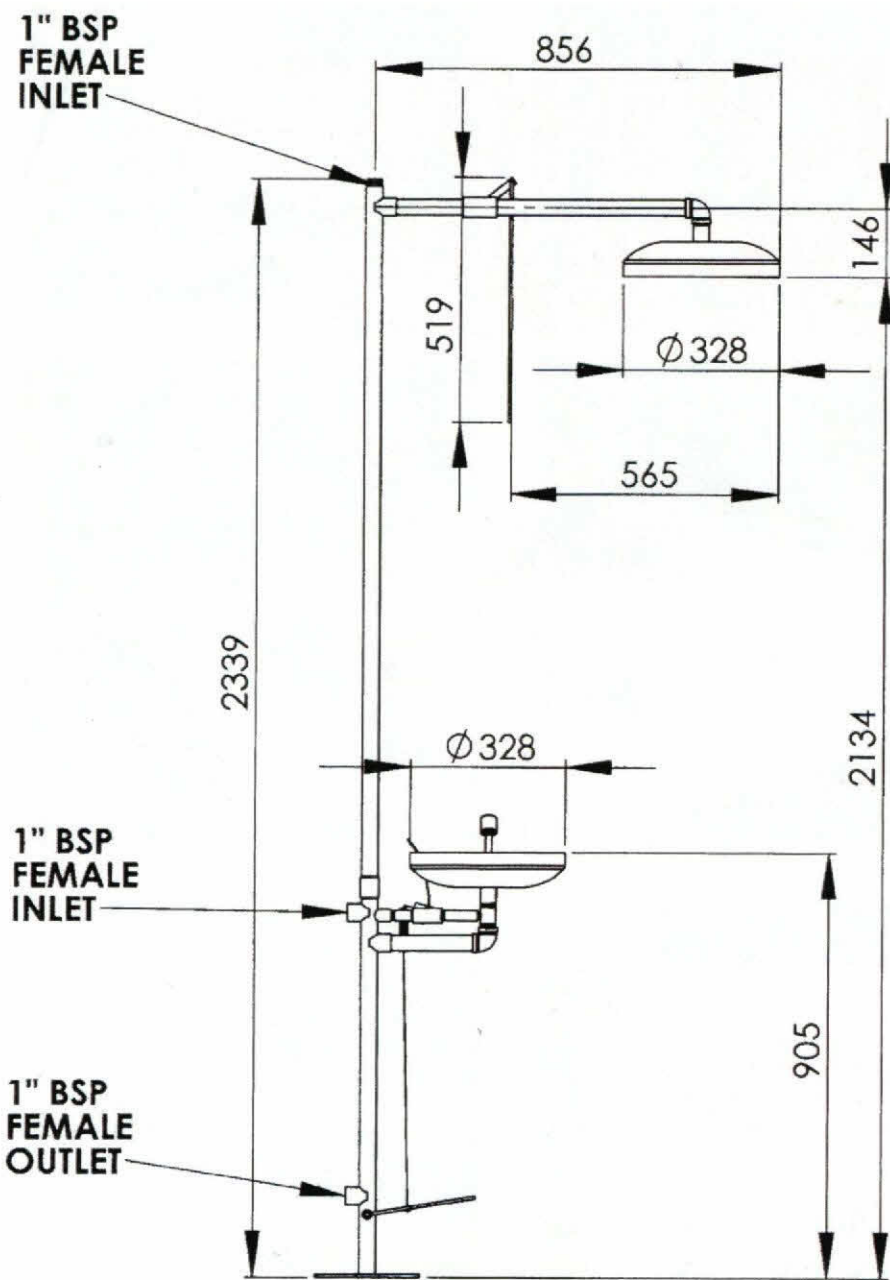

## SHOWER

### Head

328mm Stainless Steel Head S304.

### Activation

Rigid Stainless Steel Pull Rod Operates A Stay Open Stainless Steel S316 Ball Valve.

### Standard

Stainless Steel S304 Pipe with Green and White Strip for High Visibility and Easily Spotted In Emergency Situations.

## EYEWASH

### Receptor

328mm Stainless Steel Bowl S304 with reinforce rib.

### Eyewash Sprayhead Assembly

Stainless Steel S304 with PP sprayhead assembly with two soft-flow eyewash head and dust cover. Sprayhead have buit in filter to prevent pericles from the water that may cost damage to the user eyes.

### Activation


Stainless Steel push plate and foot pedal operate a stay open S316 stainless steel ball valve.

### Sign

Universal emergency sign included.



328mm Stainless Steel Emergency Shower Head  
in operation deliver 75.70 litre/min at 30psi

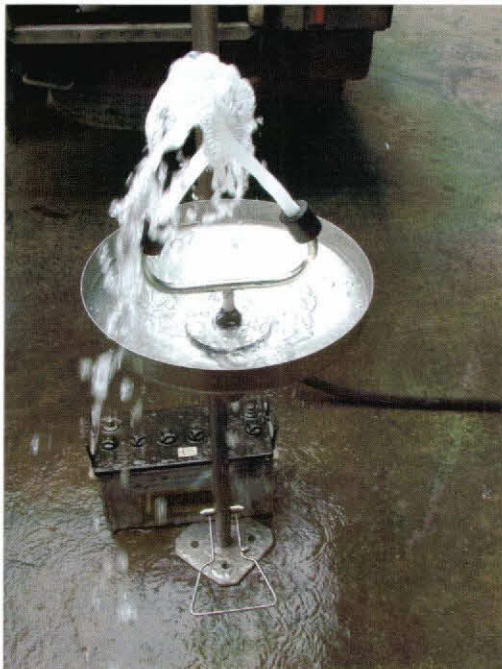

Eyewash with two soft-flow streams  
and stainless steel S304 bowl gives a  
large flow at aerated water.




Shower head give a concertrated flow of  
water in a drench colum with radius of 200mm  
comply to ANSI 2358.1-2004.





**SS001-001**

Floor Mounted Combination Unit of Drench Shower and Eyewash with Stainless Steel Bowl and Foot Pedal.

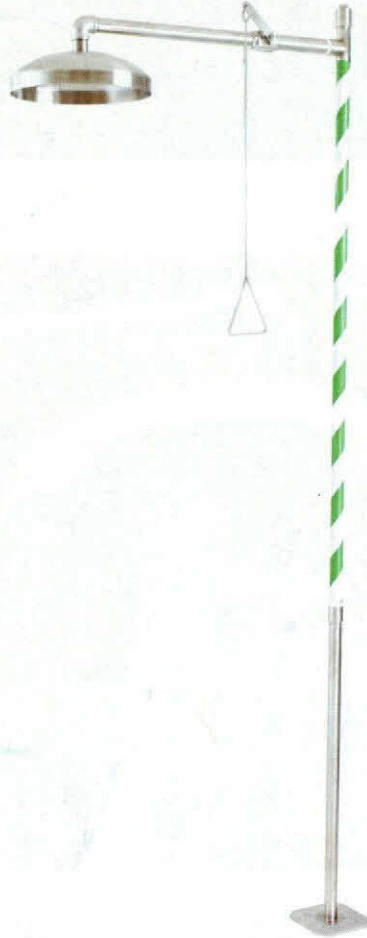

**SS002-000**

Floor Mount Drench Shower with Stainless Steel Shower Head.



**SS050-001**

Floor Mount Eyewash with Stainless Steel Bowl and Foot Pedal.



**SS075-000**

Wall Mount Drench Shower with Stainless Steel Shower Head.



**SS100-000**

Wall Mount Eyewash with Stainless Steel Bowl.



**SS150-000**

Vertical Mount Drench Shower with Stainless Shower Head.